





Ford Ranger 2019-

Art. 80695770 80695771


EU Euroraid | EU Eurobar | Orurowanie | EU Eurobar



- | | |
|---|----|
| 1. T-polt / T-bolt / T-šruba / T-bolzen | 2 |
| 2. Kronstein / bracket / wspornik / Konsole (LH) | 1 |
| 3. Kronstein / bracket / wspornik / Konsole (RH) | 1 |
| 4. Kompensaator / compensator / kompensator / Kompensator nr 1 | 2 |
| 5. Kompensaator / compensator / kompensator / Kompensator | 2 |
| 6. Kronstein / bracket / wspornik / Konsole (LH) | 1 |
| 7. Kronstein / bracket / wspornik / Konsole (RH) | 1 |
| 8. Kronstein / bracket / wspornik / Konsole (LH) | 1 |
| 9. Kronstein / bracket / wspornik / Konsole (RH) | 1 |
| 10. Polt / bolt / šruba / Bolzen M8x20 | 12 |
| 11. Polt / bolt / šruba / Bolzen M8x80 | 2 |
| 12. Polt / bolt / šruba / Bolzen M10x30 | 2 |
| 13. Mutter / nut / nakrętka / Mutter M8 DIN934-A2 | 2 |
| 14. Mutter / nut / nakrętka / Mutter M8 DIN985-A2 | 14 |
| 15. Mutter / nut / nakrętka / Mutter M10 | 2 |
| 16. Seib / flat washer / podkładka / Scheibe 8,4x16x1,6 | 20 |
| 17. Seib / flat washer / podkładka / Scheibe 8,4x24x2 | 10 |
| 18. Seib / flat washer / podkładka / Scheibe 10,5x20x2 | 4 |
| 19. Vedruseib / spring washer / podkładka sprysta / Federnscheibe A8 | 2 |
| 20. Vedruseib / spring washer / podkładka sprysta / Federnscheibe A10 | 4 |
| 21. Euroraid / eurobar / orurowanie / EU Eurobar | 1 |

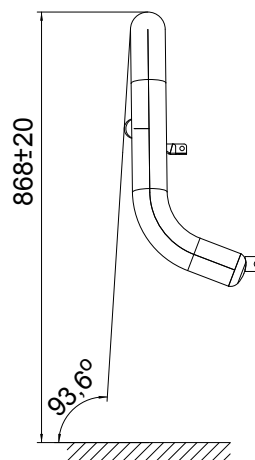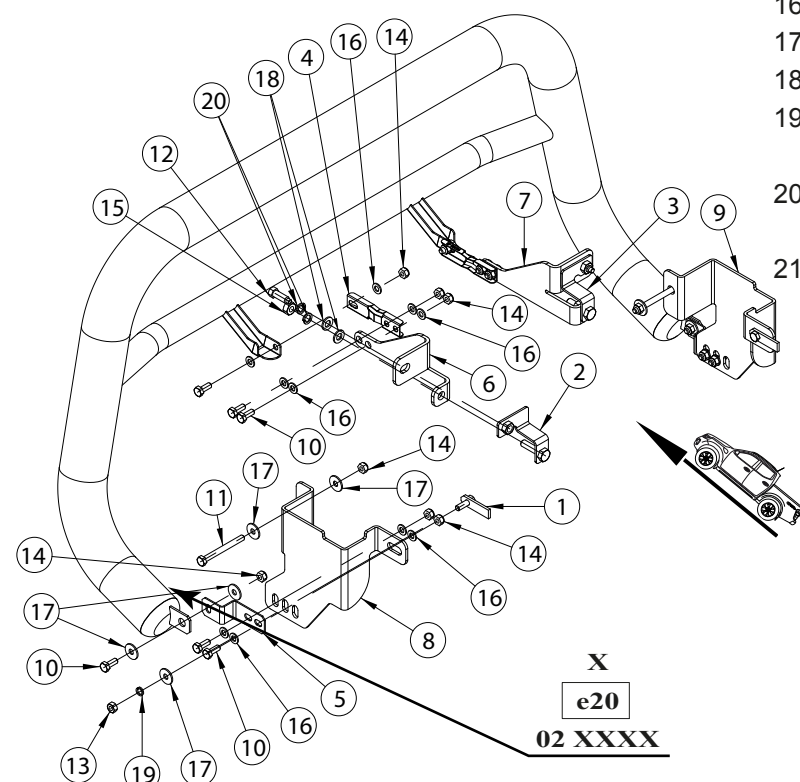

M8 - 25 Nm
M10 - 50 Nm

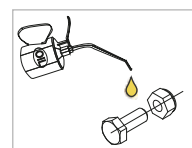









Kaal / Weight / Masa / Gewicht: 9,3 kg

Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Czas montażu b ez prac elektrycznych/

Einbauzeit ohne elektrische arbeit: 45 min

Vajalikud tööriistad / Required Tools / Wymagane narzędzia / Benötigte Werkzeuge



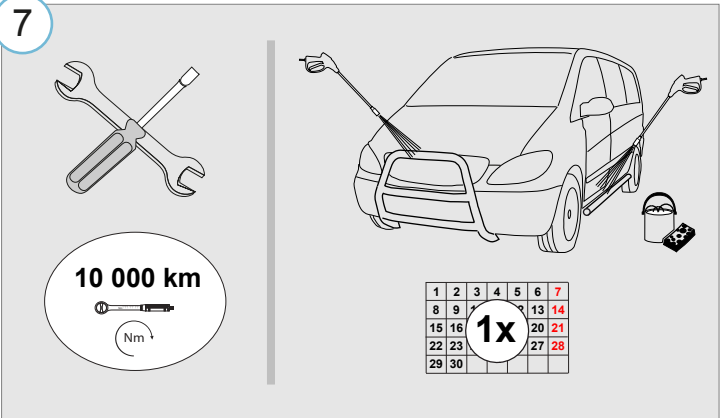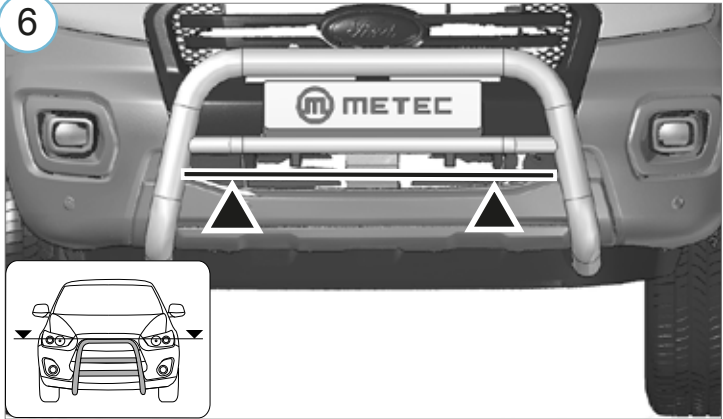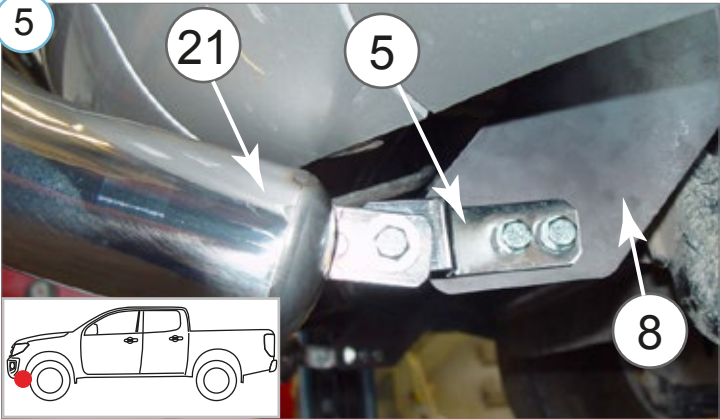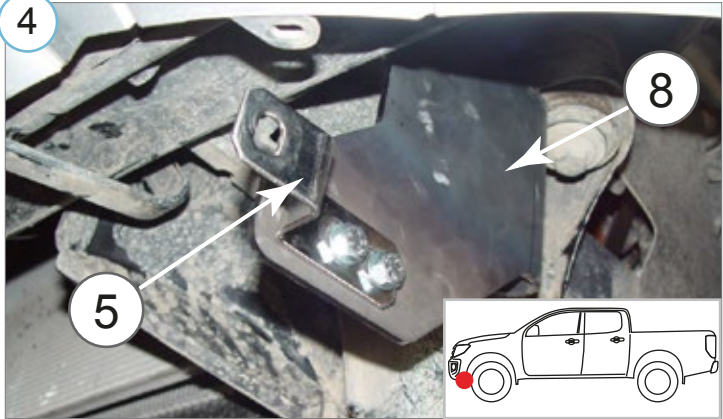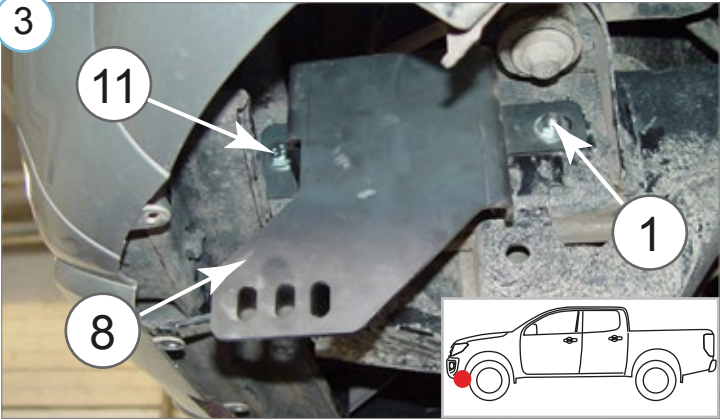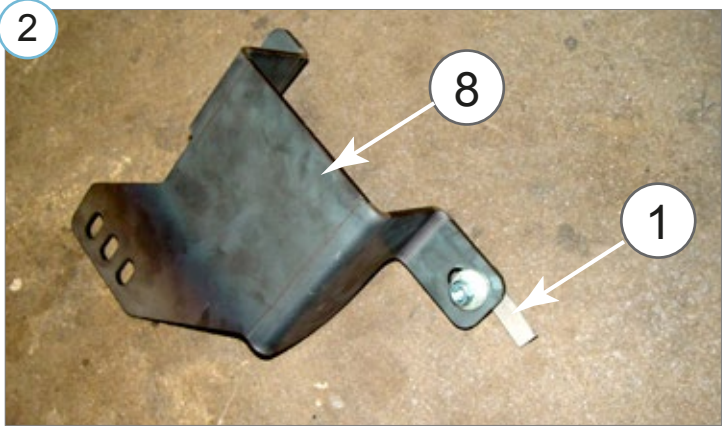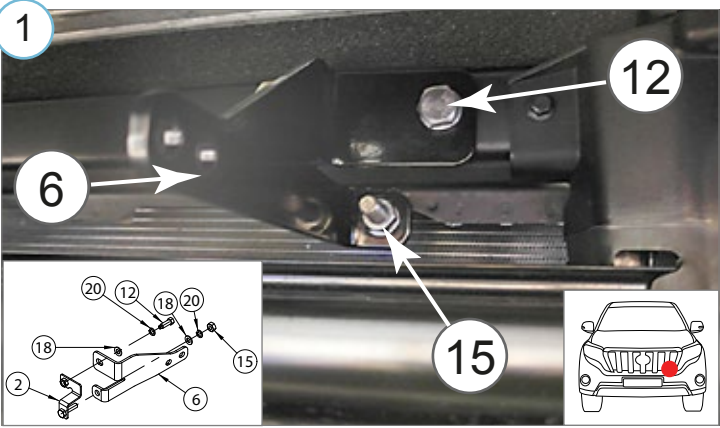

Lisa /extra / dodatek / Extra

